


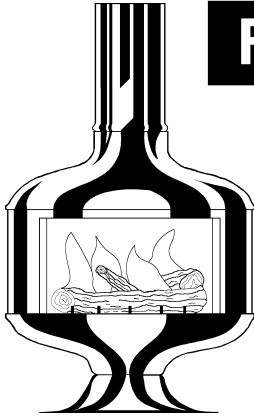

Malm Fireplaces, Inc.

368 Yolanda Avenue
Santa Rosa, Ca 95404
(707) 523-7755 - Fax: (707) 571-8036

Fire Drum GF-2/GF-3



ANSI Z21.50-1996



Assembly And Installation Instructions LEAVE THESE INSTRUCTIONS WITH THE OWNER. Listed Vented Gas Fireplace

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

FOR YOUR SAFETY WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier; call the fire department.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information consult a qualified installer; service agency or the gas supplier.

GENERAL INFORMATION

This appliance has been tested in accordance with National Safety Standards and has been certified by Warnock Hersey for installation and operation as described in this manual.

Please read all the instructions before beginning your installation. Check with your local building code agency to ensure compliance with local codes. In the absence of local codes the installation must comply with National Fuel Gas Code ANSI Z223.1- current edition.

Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative that control compartments, burners and circulating air passageways of the appliance must kept clean.

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect and replace any part of the control system that has been under water.

Unpack all parts from cartons carefully inspecting all parts. If any parts are damaged or missing, contact shipper or dealer immediately.

Do not install this appliance using damaged parts.

GAS SUPPLY

For use with natural gas or propane gas, depending on which option you have ordered. The minimum inlet gas supply pressure for the purpose of input adjustment:

Natural = Minimum 5" Water Column Maximum 10.5" Water Column

Propane = Minimum 10" Water Column Maximum 13" Water Column

- a. The supply system should include a manual shut-off valve and union in the line, so that the heater can be disconnected for servicing.
- b. The appliance and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).
- c. The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa).
- d. A 1/8 inch N.P.T. plugged tapping is provided, for test gauge connection, on the elbow adjacent to the gas control valve.

Due to high temperatures, the appliance should be located out of traffic and away from furniture and draperies.

VENTING

The unit is a vented gas fireplace and must be connected to a chimney/flue in accordance with the code, using the chimney manufacturer's instructions.

This appliance must not be connected to a chimney flue servicing a separate solid fuel burning appliance.

VENT DAMPER

This appliance is equipped with a factory installed vent damper device, located in the first section (starter section) of pipe which attaches to the collar of the appliance.

Only this appliance may be served by the vent damper device supplied with this unit.


A 6" minimum clearance must be maintained between the vent damper device and combustible construction.

The vent damper device should be inspected annually by a qualified installer.

The thermally controlled vent damper is an energy saving device designed for installation in vents of listed gas-fired appliances equipped with a draft hood. The damper saves energy by preventing the escape of heated air through the venting system, when the appliance is not in use.

It has four quadrants of bimetals which remain closed when the appliance is not in operation. Upon ignition of the appliance, the hot flue gases reach the damper, causing the quadrants to flex, thereby opening the vent passage within a short period of time. This internal flexing of the bimetals is the only movement in the damper. No power supply or functional connection with the appliance controls is required for operation.

Installation of vent dampers can increase the potential for condensation in oversized masonry chimneys. This is due to poor thermal insulation of the chimney and reduced air movement when the damper is closed. We recommend that masonry chimneys be lined with materials such as Type B gas vent, aluminum or stainless steel to reduce the chance of condensation. Most building codes, in fact, require the lining of chimneys when gas appliances are vented into masonry chimneys.

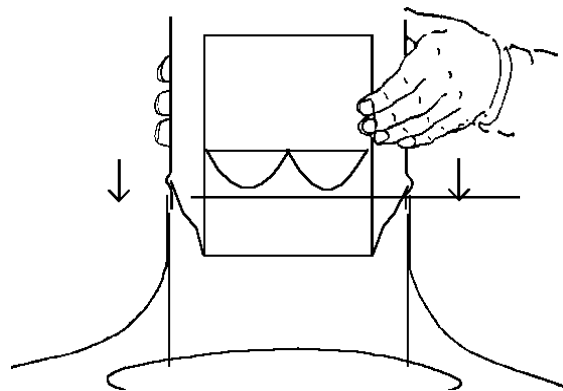

CLEARANCES

Make sure that minimum clearances to combustible materials are maintained during installation including adequate space for the proper operation and servicing of the heater.

The minimum clearances from the appliance to combustibles are shown on figures 1 and 2. Place the appliance on a flat, solid, continuous surface (i.e. wood, tile, concrete, metal).

NOTE: Ensure that the combustion air opening of the heater is not obstructed. Provision must be made for adequate combustion and ventilation air, with sufficient clearances around the opening. There must be adequate accessibility clearance for servicing and proper operation.

CLEARANCES

SIDEWALL AND BACKWALL INSTALLATION

Unit to Sidewall -----	3"
Unit to Backwall -----	3"
Connector to Sidewall -----	14 1/2"
Center of Connector to Sidewall -----	19"
Connector to Backwall -----	14 1/2"
Center of connector to Backwall -----	19"

CORNER INSTALLATION

Unit to Adjacent Wall -----	3"
Connector to Adjacent Wall -----	14 1/2"
Center of Connector to Adjacent Wall -----	19"

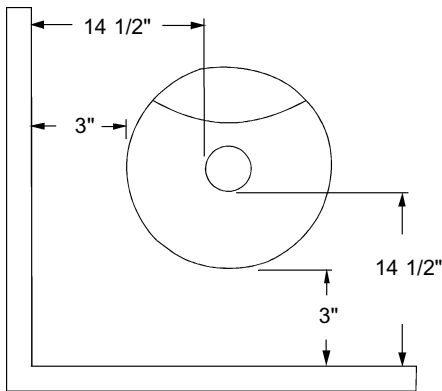


Figure 1

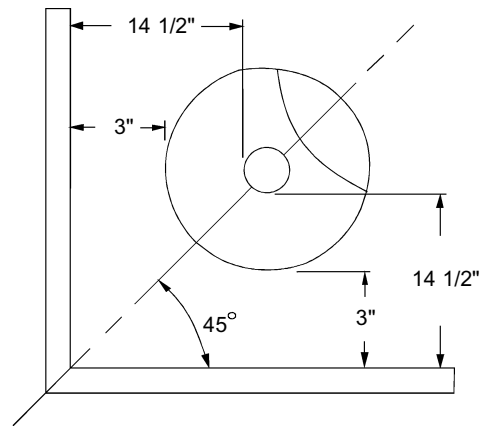


Figure 2

WARNING

Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition. Young children should be carefully supervised when they are in the same room as the appliance.

CAUTION

Any safety screen or guard removed for servicing an appliance must be replaced prior to operating the appliance. Clothing or other flammable material should not be placed on or near the appliance.

Installation Instructions


Do Not Install In A Mobile Home

READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.

1. Position unit to comply with the minimum clearances to combustible materials. Minimum clearances are shown in figures 1 and 2. It is recommended that no overhead cross members in the ceiling or roof be cut. Reposition unit if necessary, being careful not to move closer than the minimum clearances.


VENTING REQUIREMENTS

Use a masonry, "B" vent or class "A" chimney. Follow all manufacturers' requirements and local building codes. If you are using "B" vent utilize the support box supplied with unit.

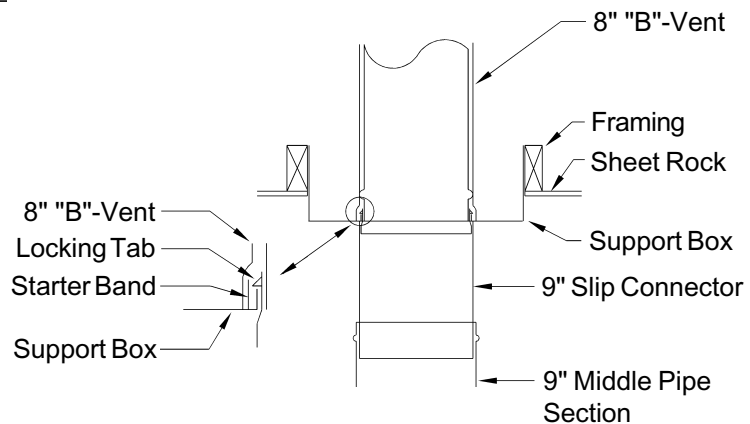

GAS LINE ATTACHMENT

1. The gas supply line must be installed to penetrate the floor, (or floor protector if required), at the center-line of the gas unit. This supply line must be a minimum of 1/2", black iron type pipe.
2. The gas supply line with a 90 degree elbow should be 10 1/2" minimum to 11" maximum from the floor or floor protector to the top of the elbow. The elbow must face the front of the unit.

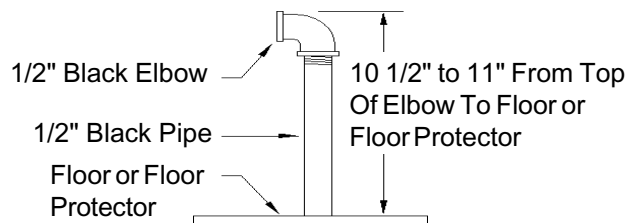

3. Place the unit base assembly over the top of the gas line. Confirm that wall clearances are correct prior to proceeding.


Installation Instructions continued

- Lift the control cover. Using a 1/2" x 8" nipple, extend the gas supply line to the front of the unit.
- Attach gas supply shut-off valve part # GF-1A to the supply line.
- Connect 3/8" x 12" flex connector part # GF-1B to the shut-off valve.
- Make certain the gas valve is closed. Turn on gas supply and test for leaks using a soapy water solution.

1. ASSEMBLE UNIT.


GF2

- Place the body section into the base. Align the opening with the control cover.
- Place the hood over the body section.

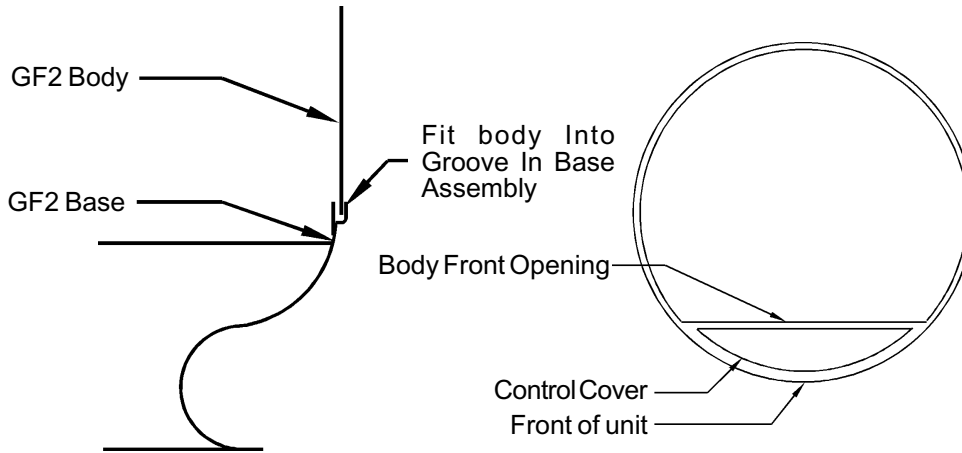


GF3

- Place the hood into the base. Align the opening with the control cover.

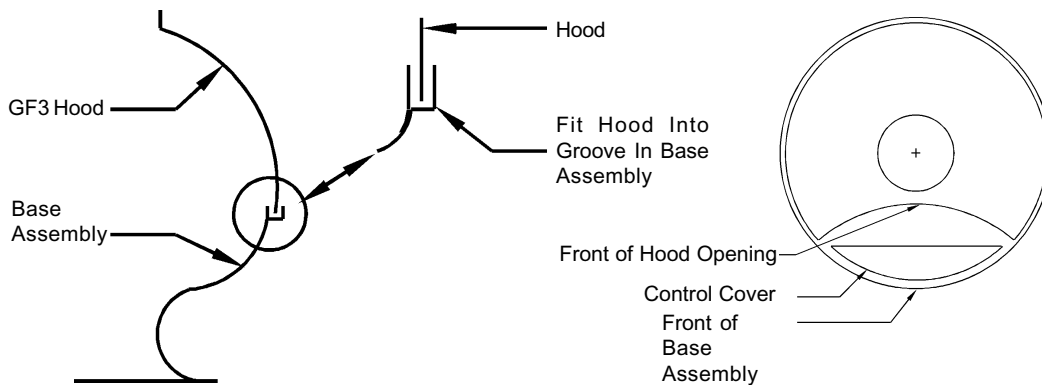


Installation Instructions continued

2. Attach the slip connector pipe to the support box. Insert the slip connector pipe into the support box and twist to lock into place.

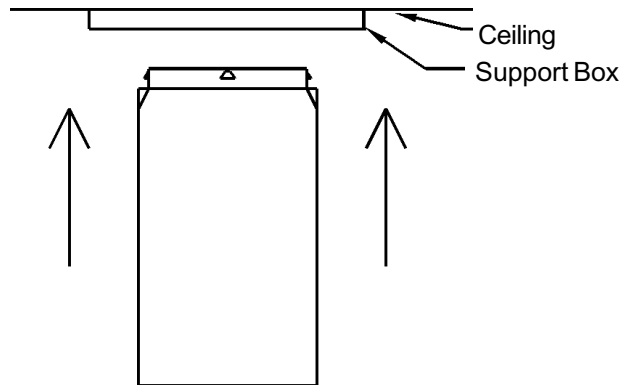


3. Slip the middle section over the slip section only far enough to allow installation of the starter section. While holding the middle section place the starter section with the thermal damper at the bottom, into the hood.

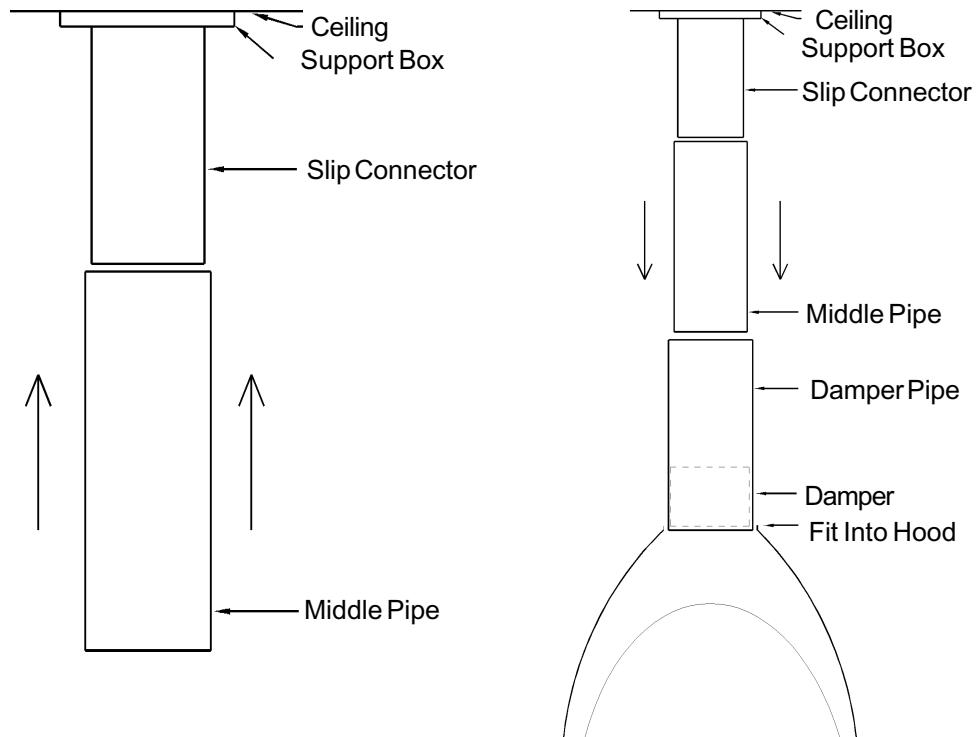

Installation Instructions continued

GAS LOG SETUP


1. Place the legs of the grate into the leg holders.

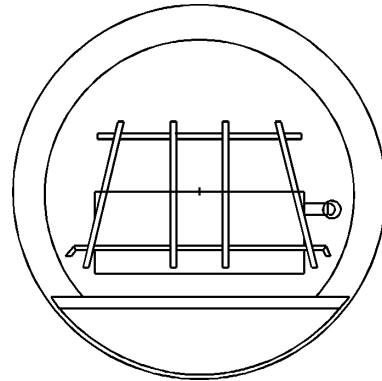

-
2. Spread the vermiculite first, no more than 1/4" thick, over the burner area.

Spread glowing embers evenly over the vermiculite.

After lighting the unit spread the embers to achieve an even coal effect.

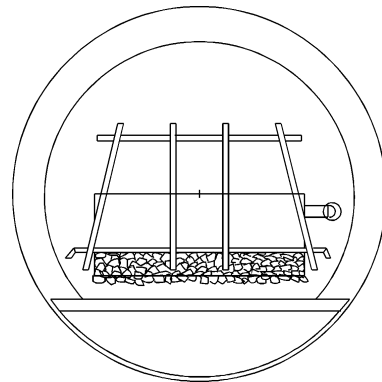


-
3. Place fire logs as shown, using alignment knobs on the logs.



4. Light the pilot following lighting instructions.
Turn the valve to on and the burner should light.





OPERATING INSTRUCTIONS

- A.** Follow these instructions exactly. This appliance has a pilot which must be lighted by hand.
- B.** **BEFORE LIGHTING** smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the the floor.
- WHAT TO DO IF YOU SMELL GAS**
- Do not try to light any appliance.
Do not touch any electric switch; do not use any phone in your building.
Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. If you cannot reach your gas supplier, call the fire department.
- C.** Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D.** Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

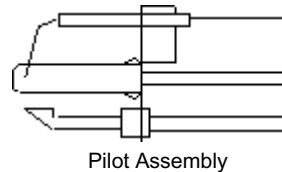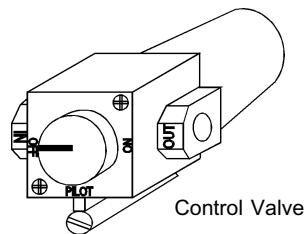
1. **STOP!** Read the safety information above on this label.
2. Lift the control access panel located in front of the screen.
3. Push in the control knob slightly and turn clockwise  to "OFF".



NOTE: Knob cannot be turned from "PILOT" to "OFF" unless knob is pushed in slightly. Do not force.

6. Wait five (5) minutes to clear out any gas. If you smell gas, **STOP!** Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
7. Turn knob on gas control counterclockwise  to "PILOT."
8. Push in control knob all the way and hold in. Immediately light the pilot by pushing in the red lighter button. Continue to push the red lighter button until the pilot is lit. Continue to hold the knob in for about one (1) minute after the pilot is lit. Release the knob and it will pop back up. If the knob does not pop up, turn off the gas shut off valve and call a service technician. Pilot should remain lit. If it goes out, repeat steps 3 through 8.
9. Turn gas control knob counterclockwise  to "ON."
10. Lower control access panel.

To Turn Off

1. Lift control access panel.
2. Push in gas control knob slightly and turn clockwise  to "OFF." Do not force.
3. Lower control access panel.

MAINTENANCE INSTRUCTIONS

GENERAL SAFETY

1. Always shut off the gas supply and make sure that the heater is cool before starting any servicing operation.
2. Always check for leaks after servicing.
3. Always check for correct combustion and ventilation air flow. The flow of combustion and ventilation air must not be obstructed.
4. Always check that the appliance area is clear and free from combustible materials, gasoline, and other flammable vapors and liquids.

PERIODIC CHECKS

1. Keep the burner and control compartment clean by brushing and vacuuming at least once a year.
2. The flame pattern should be checked periodically. The flame color should be blue with yellow tips. If needed adjust the air shutter to provide a proper flame. See Figure F.
3. A qualified service person should inspect the appliance vent system prior to use and at least annually, to ensure that the flow of combustion air is not obstructed.
4. If you are unsure how to perform these maintenance procedures have a qualified field service person check the unit at least annually.


NOTE: During the first few fires the odor of paint or oils remaining from manufacturing are likely to release an odor. This is normal and will stop as soon as the paint has cured.







4. If for any reason a log should break it must be replaced with the same log. See the log diagram for the exact replacement log needed. The position of the logs must be as shown in the diagram.

CARE OF FINISH

1. The matte black finish can be wiped clean with a damp cloth. If the finish becomes marred or scratched it may require touch up spraying. Use Stove Bright Flat Black spray. This is available from your dealer or from Malm direct.
2. If your unit is porcelain enamel use any glass cleaner to wipe the unit clean. Minor scratches can be polished with most non-abrasive auto polish. If the porcelain should become chipped or severely damaged an enamel touch up is available from your dealer or Malm direct.

ITEM	PART NO.	DESCRIPTION
1-A	GF-1A-B3812-VIM	Gas Shut Off Valve
1-B	GF-1B	3/8" x 12" Flex Connector
1-C	GF-1C	3/8" Fitting - Brass
2	GF-2-RV20	Pressure Rgulator
3	GF-3	Gas Valve Mounting Bracket
4	GF-4-J-100A	Gas Control Valve
5	GF-5	3/8" x 1 1/2" Black Nipple
6	GF-6	3/8" - 90 Degree Elbow - Black
7	GF-7-219-3/8	1/8" M.I.P. Plug - Black
8-A	GF-8A	3/8" Fitting - Brass
8-B	GF-8B	3/8" Fitting - Brass
8-C	GF-8C	3/8" x 18" Flex Connector
9	GF-9-42	Air Shutter Assembly With Orifice Natural
9	GF-9-53	Air Shutter Assembly With Orifice Propane
10	GF-10	Thermocouple Tube 18"
11	GF-11	Pilot Supply Tube 18"
12	GF-12	Piezo Lighter Mounting Bracket
13	GF-13-Mark21	Piezo Lighter
14	GF-14	Piezo Lighter Wire 18"
15	GF-15-MBT	Lighter Electrode
16	GF-16	Thermocouple
17	GF-17	Pilot

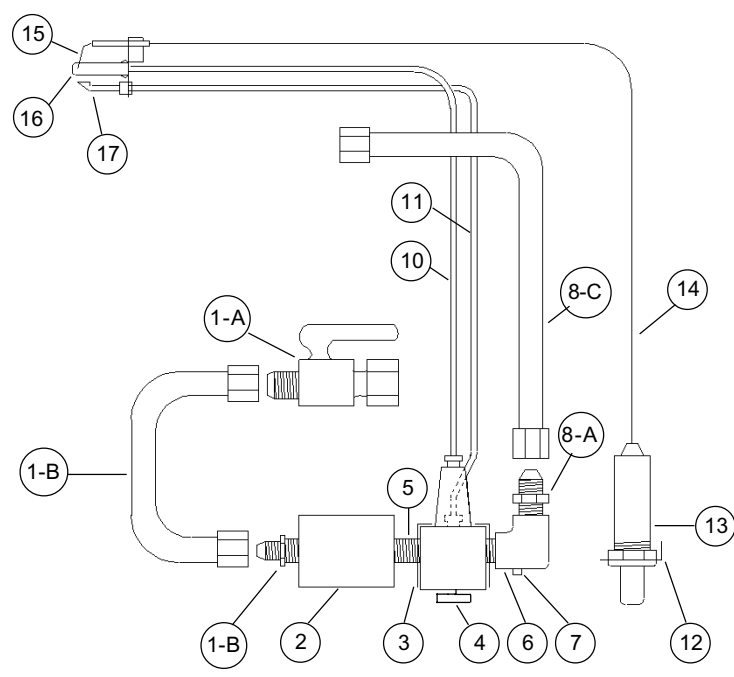

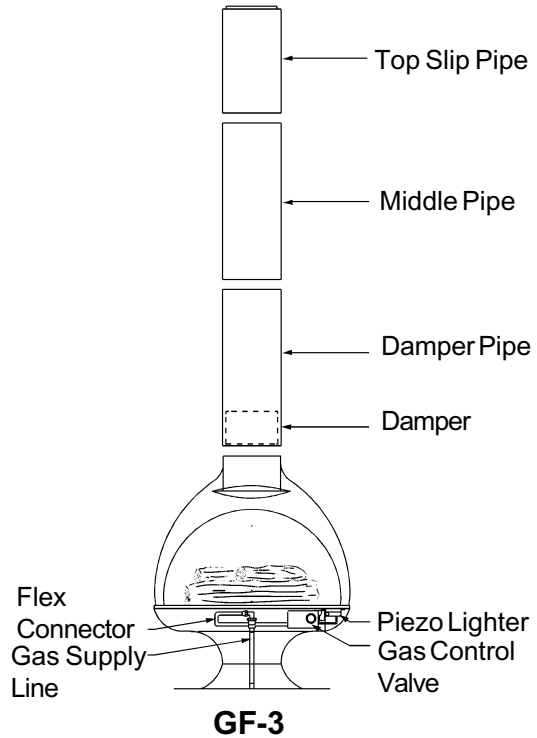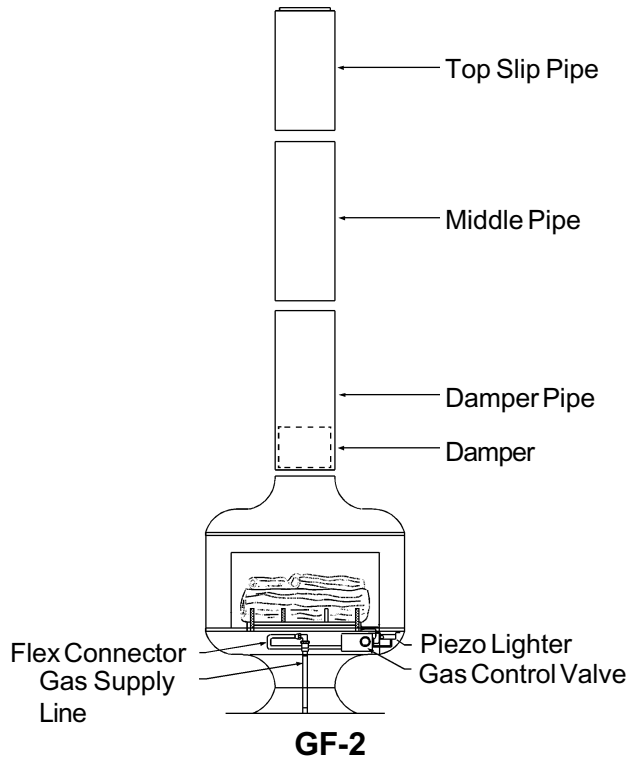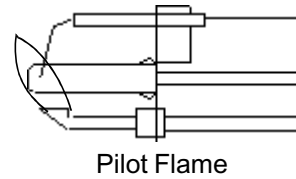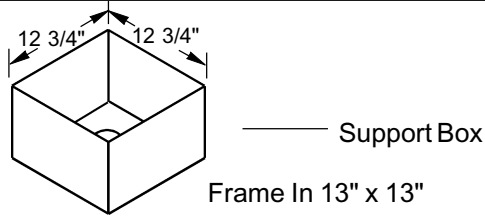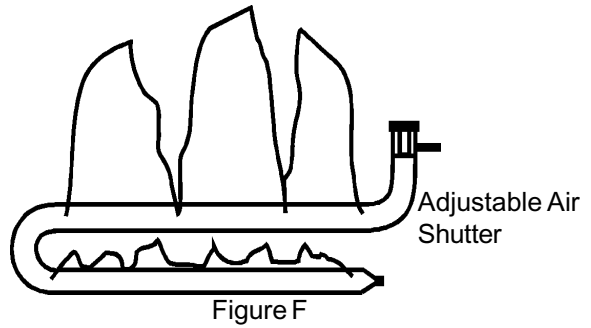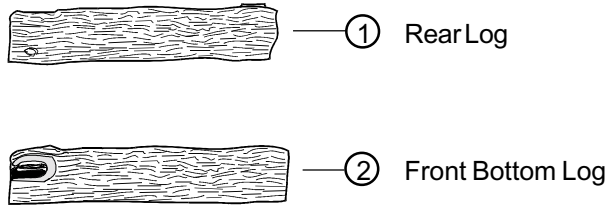

Malm Fireplaces, Inc.



368 Yolanda Avenue
 Santa Rosa, Ca 95404
 (707) 523-7755 - (800) 535-8955
 Fax: (707) 571-8036
 email: info@malmfireplaces.com